

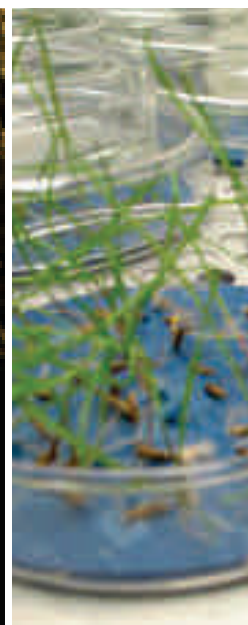
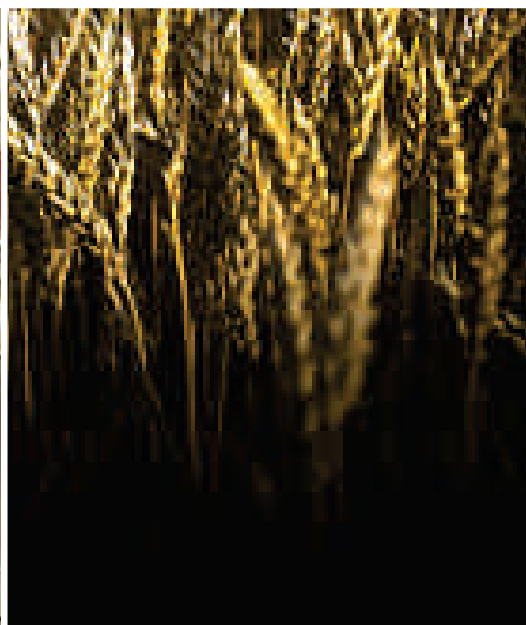


GRAIN MOISTURE METERS

Model No.: ACM-GMM-2656

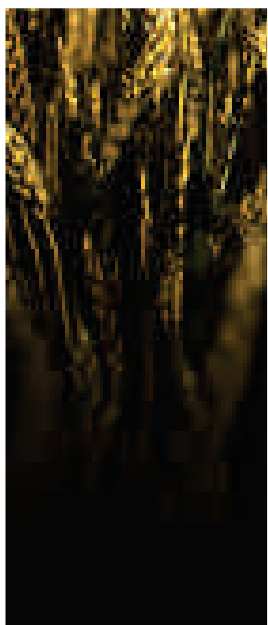

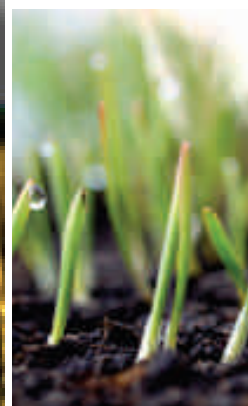

GRAIN MOISTURE METERS

Model No.: ACM-GMM-2656

We are manufacturers of **Grain Moisture Meters** in India since 1990. We have developed our unique range of grain moisture meters, closely working with leading scientific brains of the country along with specialists of various industries, thus ensuring a high level of accuracy, performance and reliability in all our grain moisture meters. As a result, all our products have a huge acceptance and usages in various agro industries, food processing industries, agriculture universities, post harvest technology institutes, storage godowns and cold storages across India and abroad.

We specialize in both standard as well as customized moisture meter designed to meet specific demands of general usage customers and research oriented applications. Over a short period of time Weiber brand have developed as reliable exporters of grain moisture meter in India, catering to vast markets in South East Asia, Middle East, Africa and Europe.

Apart from regular exports we are also catering to our domestic market. Our grain moisture meter is in great demand in various research stations, agriculture universities, cold storage and various agro based industries.

TECHNICAL SPECIFICATIONS

Test object	Grains
Test range	3~35%
Repeat error	equal or less than 0.2%
Test error	equal or less than $\pm 0.5\%$ (mainly moisture range)
Test time	equal or less than 10s
Power supply	four # 5 dry battery or 220V AC
Automation switch off	The instrument will be switched off automatically if there is no operation within 3 minutes.
Operating Temperature	0~40° C
Temperature compensation	automation
Net weight	880gram
Accessories	container and filler, 4 dry batteries, cleaning brush, 200gram standard poise(8688),use manual, certificate and guarantee card.

USAGES

- Our Grain Moisture Meter is ideally use for food grains
- Wheat moisture meter application
- Maize moisture meter application
- Barley moisture meter application
- Millets moisture meter application
- Sorghum moisture meter application
- Buckwheat moisture meter application
- Peas moisture meter application

BASIC FEATURES OF GRAIN MOISTURE METER

- Easy Usage
- Compact Design
- Sturdy Housing
- High Accuracy
- High Repeatability
- Large Display (LCD)
- Solid State Micro-Based Technology
- Fast Display Of Results (2 second)
- Automatic Temperature Correction/Compensation
- Long Lasting Battery
- Low Battery Indication Display



OPERATING PRINCIPLE

Our grain moisture meter works on the principle of measuring the electrical conductivity of a given material, bearing a fixed relation with moisture content of the given material, which is measured using a superior solid state technology and displayed on the screen.



An ISO 9001 : 2208 | ISO 14001 : 2008 | ISO 13485
WHO: GMP Products | GLP Compliant Products

www.acmasindia.com | www.acmasglobal.com | www.test-chambers.com

ACMAS TECHNOLOGIES PVT. LTD.

CORPORATE OFFICE/ SHOWROOM (INDIA)

Plot No. 352-353, Sector – 57
Phase- IV Kundli, Sonapat, Haryana - 131028
Land Line No.: +91 - 11- 47619688,
Fax: +91-11-47619788
E-mail.: info@acmasindia.com

SALES OFFICE (HONG KONG)

Unit D 28 11/F Wing Tat Comm,Bidg 97, Bonham Strand East,
Sheung Wan, Hong Kong (PRC)
Tel.: 0086-13929598046 | 0086- 18922303099
E-mail.: hk@acmasindia.com

SALES OFFICE (RUSSIA)

Inmed Trade Street Ozerkovsky Embankment,
Unit No 50, Straine- 1, Off- 502, Moscow, Russia
E-mail.: info@acmasindia.com
Tel.: 0049- 79592345 | Email: russia@acmasindia.com